


AIR SCREWDRIVER

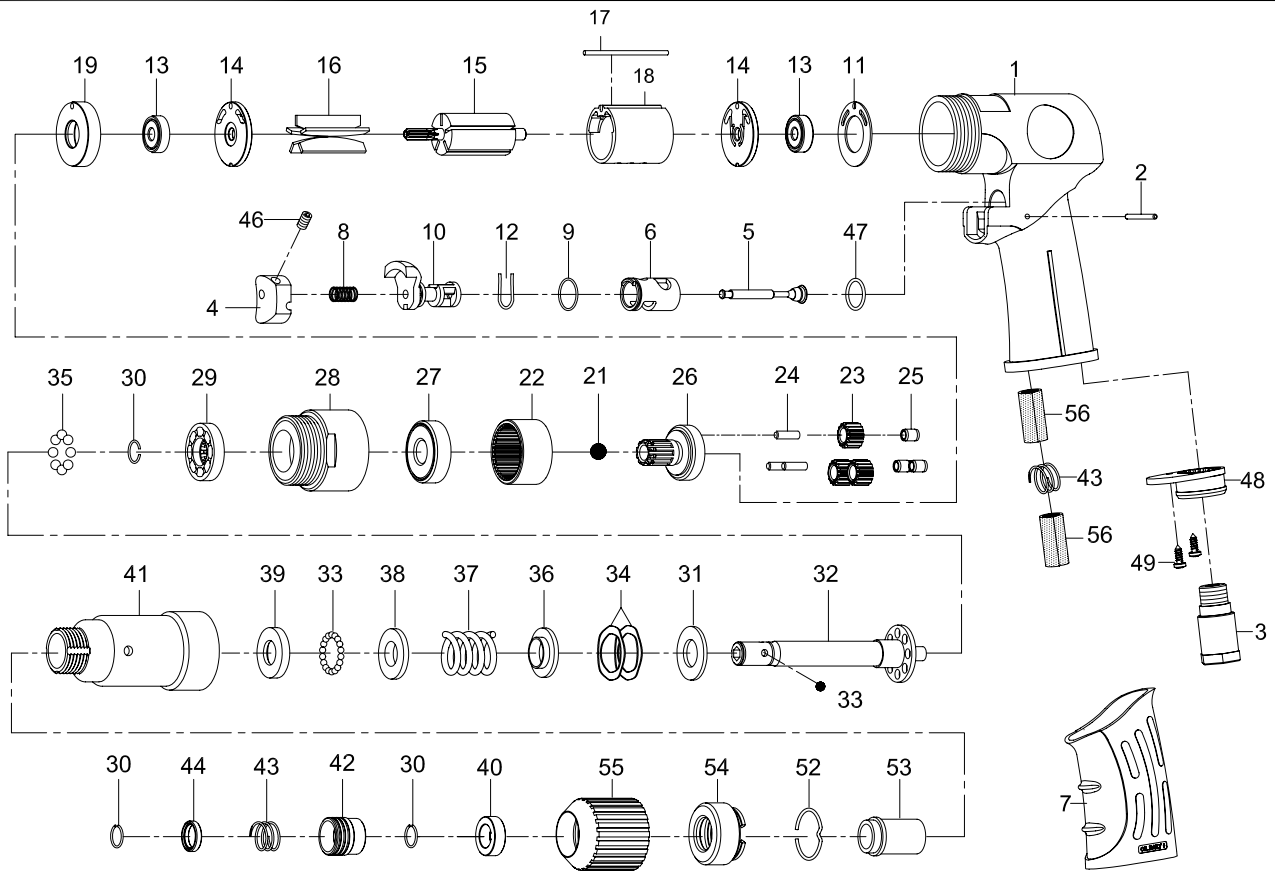

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	822501	Motor Housing	28	80228	Clamp Nut
2	82202	Spring Pin (Ø2.5*25.8L)	29	88329	Drive Dog
3	70103	Air Inlet	30	80230	Retaining Ring (3)
4	82204	Trigger	31	88331	Washer
5	82205-12SUB	Valve Stem Set	32	88332	Cam Spindle
6	82206	Reverse Bushing	33	40145	Steel Ball (18) (1/8")
7	751152	Rubber Grip	34	88334	Wave Washer (2) (WW-14)
8	82208	Valve Spring	35	88335	Steel Ball (8) (Ø5)
9	82209	O-Ring (Ø14*Ø1)	36	88336	Thrust Washer
10	82210	Reverse Lever	37	88237	Spring
11	80211	Motor Gasket	38	88338	Washer
12	82212	Reverse Retainer	39	88339	Adjust Nut
13	030113	Ball Bearing (2) (626ZZ)	40	88340	Spacer
14	80214	End Plate (2)	41	88341	Clutch Housing
15	80215	Rotor	42	80242	Ball Retainer
16	80216	Rotor blades (5)	43	80243	Spring (2)
17	80217-13	Spring Pin (Ø2.5*55L)	44	80244	Washer
18	80218-22	Cylinder	46	82246-12	Set Screw (M5*8L)
19	80219	Spacer	47	82247	O-Ring (Ø13.5*Ø1.5)
21	88321	Steel Ball (Ø7)	48	70110	Exhaust Diffuser
22	80222	Internal Gear	49	40309	Screw (2) (TS2.9)
23	80223	Planet Gear (3)	52	88352	Retainer
24	30124	Pin (3) (Ø4*13.8L)	53	88353	Bushing
25	80225	Bushing (3)	54	88354	Adjustable Screw
26	88226	Work Spindle	55	88355	Adjustable Knob
27	080227	Ball Bearing (6201Z)	56	70536	Damping Diffuser (2)